

ovela

Electric Heated Throw Quick Start Guide

Before Use


Read and follow all instructions in this quick start guide, even if you feel that you are familiar with the product. Keep a copy handy for future reference. The energy rating of this product is based on specific loading tests, and normal use may draw significantly less power.

When using any electrical products, basic safety precautions must be followed. PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING PRODUCT!

Warnings

- To reduce the risk of fire, electric shock or injury to persons or property:
- Read all instructions before using the throw, and keep a copy handy for future reference.
- Use only with a plug that matches the voltage rating of the throw.
- Do not immerse the throw in liquids, or allow running water onto it during use as this could create an electrical hazard.
- Do not reach for an appliance that has fallen into water. Switch off at the power supply and unplug immediately.
- Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or been damaged in any matter. Contact the Kogan.com support team for advice.
- Do not operate the throw with wet hands or a wet body.
- This appliance is not designed for outdoor use.
- Do not allow the cord to come into contact with the heated surface during use.
- All covers and fabrics must be in place to prevent direct access to the heating elements during use.

Control Panel Guide

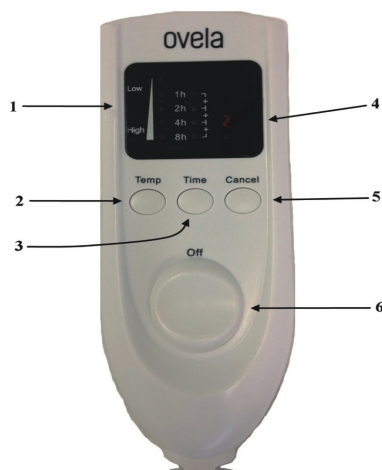

1. Temperature/Timer Indicators
2. Temperature Button
3. Timer Button
4. Power Indicator
5. Cancel Button
6. ON/OFF Switch

Operation Guide

Connecting the Controller

The throw has a detachable controller and a waterproof element that makes your throw machine washable. **Please ensure the electric throw controller is in the OFF position and not connected to the power supply before washing it.** Ensure that the locking clip engages with the small plastic pin on the plug.

Disconnecting the Controller

The socket has a locking clip that engages with a small pin on the plug. With the controller set to the OFF position and the power plug removed from the power socket, push the clip out to release the socket pin and withdraw the connector plug by pulling it away from the socket.

Controller Usage

- Switch the power button to ON, at which point the indicator light will illuminate.
- Press the 'Temp' button to activate the thermostat display, then cycle through the different available heat settings.
- Press the 'Time' button to set the timer (timer range can be from 1 hour to 10 hours).
- Switch the power button to OFF, at which point the indicator light will go out.
- This product has a memory function. Please press the 'Cancel' button to clear the settings from the last time the throw was used.
- This product is automatically temperature controlled. It will fast heat when powered on, then it will automatically control the temperature after 15 minutes.

If you have any questions or concerns about this product, please contact the Kogan.com customer support team.