

QUICK START GUIDE



CERTA MULTIPURPOSE FOLDABLE LADDER WITH PLATFORM 2.8M

CTLADDRM28A

Safety and Warnings


Important: To avoid serious injury or death, read all of these instructions and observe all warning labels before use! Retain manual for future reference.

- Always check that the stabiliser bars are secure before placing any weight on the ladder.
- Always ensure that all ladder hinges are locked into position before using it. Each pair of hinges must be locked simultaneously.
- The hinges may let out an audible “click”, but always visually check the locking indicators to ensure that the locking mechanism is fully locked.
- NEVER use the ladder while under influence of alcohol or drugs of any kind.
- NEVER set up the ladder in front of doors that are not locked.
- DO NOT use ladder jacks with this ladder.
- Pushing or pulling anything while on the ladder may cause the ladder to tip and you to fall. Use extreme caution if you must push or pull from the ladder.
- NEVER attempt to jump, walk or move the ladder while you are on it. If you need to move the ladder, get off first. Move it, and then repositioned yourself.
- To avoid losing balance and/or tipping the ladder or scaffold, NEVER overreach. Always stay balanced while on the ladder. Keep your body centred between the side rails.
- NEVER use the ladder as a brace in any way.
- NEVER place yourself or allow anyone to stand or walk under the ladder whilst in use.
- This ladder is not a toy and is not meant for use by or near children. NEVER leave the ladder and scaffold set up and unattended.
- DO NOT stand on the ladder while releasing the locking mechanisms.
- DO NOT attempt to switch ladder positions whilst on the ladder.
- NEVER use stairs if they are not level. This could cause the ladder to tip or cause you to lose your balance.
- Only use ladder assembled in the positions illustrated in this manual.
- Always wear shoes that have good grip while using the product. Avoid wearing loose clothing that could dangle and get caught.
- It is always advisable in ladder positions to get someone to hold the bottom of the ladder for added security.
- DANGER! METAL CONDUCTS ELECTRICITY!
- DO NOT let this ladder or any of its parts contact live electrical wires.
- Maximum weight capacity for this ladder is 150kg. The weight of user plus tools and materials should not exceed 150kg.
- Always ensure all locking mechanisms are in the locked position before stepping on it or applying weight of any kind.
- The stabiliser bars must be properly and securely fitted before use.
- DO NOT use any attachments, components or accessories not sold or recommended by the manufacturer with this ladder.
- Inspect all parts prior to each use. DO NOT use if any parts of the ladder are missing, damaged or worn in any way.

- NEVER attempt to fix a damaged ladder. Always have a qualified repair person fix the damaged ladder.
- Cease use and dispose of the ladder safely if it is exposed to excessive heat (such as house fires) or corrosive agents (like acids or alkalis).
- Use extreme caution when using in windy, rainy or icy conditions.
- Always use a firm grip and face the ladder whenever possible.
- Always set the ladder on a surface that is level, stable and dry.
- NEVER place the ladder on a slippery surface or try to increase the height of the ladder by placing anything under the stabiliser bars.
- Always use extreme caution when using the ladder on a protective surface, such as a thick carpet or rug. This may prevent the rubber feet from gripping the surface properly.
- Always use caution when getting on or off ladder.

Operation


Before use, attach the stabiliser bars. Remove the transit protectors at each end of the ladder and secure with the nuts bolts and washers provided. See diagram below

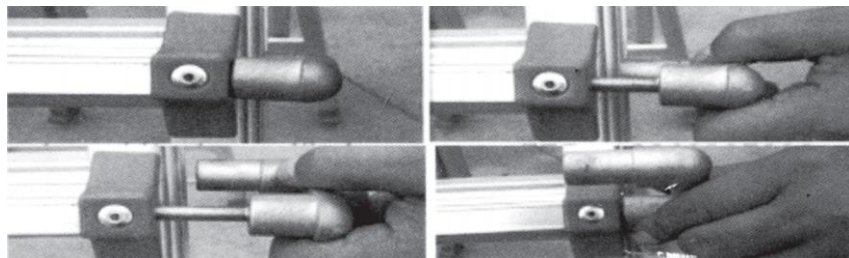

- DO NOT use the ladder without the stabiliser bars attached unless otherwise stated.
- Always check the stabiliser bars are secure before putting any weight on the ladder.
- Only use the stabiliser bars that were supplied with the ladder.

Before using the ladder, lock the hinge mechanism as well. Each pair of hinges must be locked simultaneously.

To activate the hinge lock, pull out the locking levers to release a pair of hinges so that the locking pin is in the “O” position, indicating the hinge is not locked. Fold the relevant sections of the ladder to form the position that you require. The hinges will automatically “snap” into position at certain angles, and the locking pin is in the “L” position, indicating that it is locked.

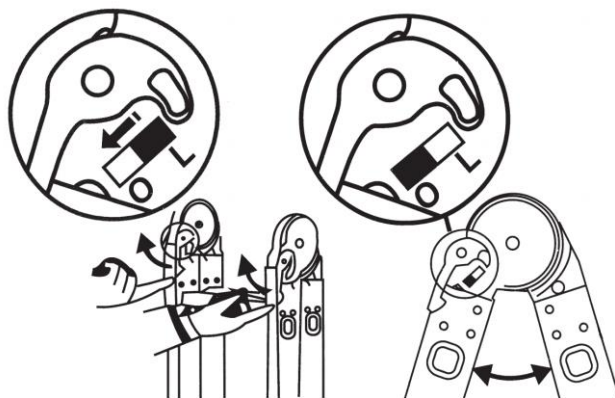

The hinges may let out an audible “click”, but always visually check the locking indicators to ensure that the locking mechanism is fully locked.

Ladder Positions


Do not attempt to use the ladder in a position other than those illustrated here.



Step Ladder

Never stand straddling between the front and back sections of the ladder.


Never stand on or above the second rung from the top.

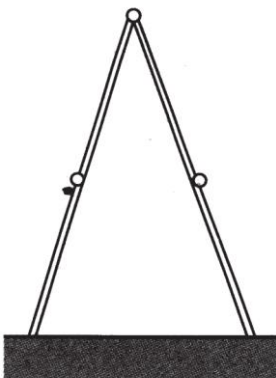


Straight Ladder Positions

Never stand on the top three rungs.

The ladder should sit at an angle of approximately 75 degrees.







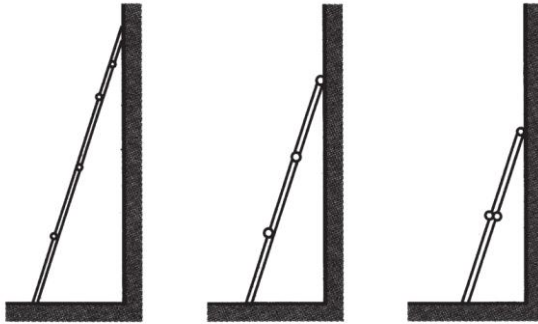


Take extra care when using the shorter positions, as the stabiliser bar is not in contact with the wall.

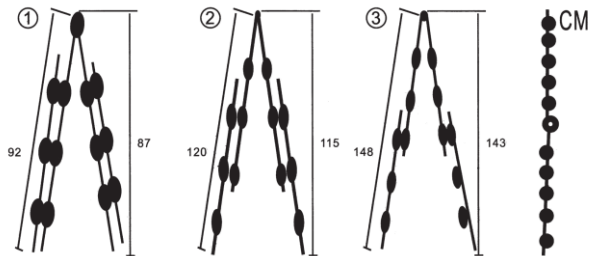

Scaffold Positions

Do not use the ladder in these positions without the scaffold plates in place.

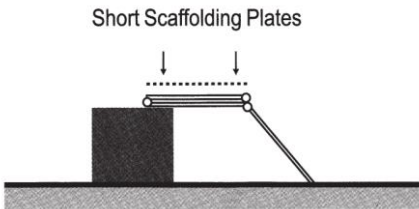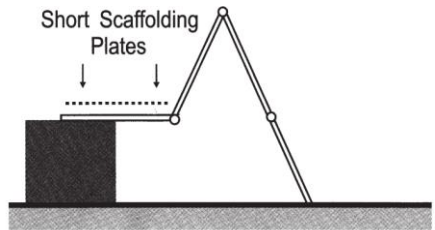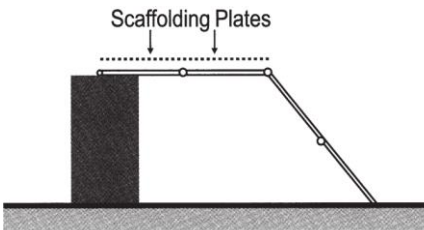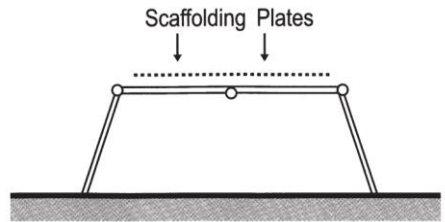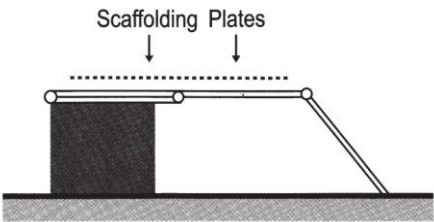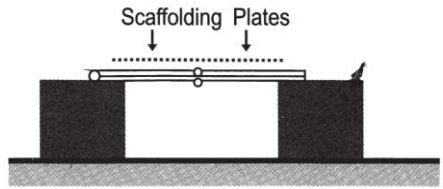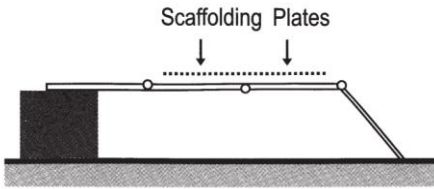

In this last position, remove the stabiliser bar for safety.

This is a **Quick Start Guide**, and we hope that this has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan