





ERGO LUX

Pro Standing Stool

ELSTLST360A

Note: the red plastic cap must be removed before use. Failure to remove the plastic cap will result in the stool malfunctioning.

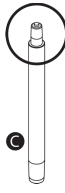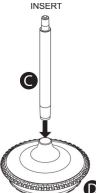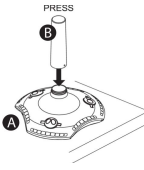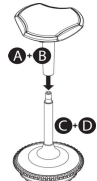Assembly


<p>Step 1</p>  <p>Remove the red plastic cap from the tip of the cylinder C.</p>	<p>Step 2</p> <p>INSERT</p>  <p>Insert the tapered end of cylinder C into the base D. Align and press down firmly to engage the cylinder into the base.</p>	<p>Step 3</p> <p>PRESS</p>  <p>With the seat A resting on the cushion, press firmly on the plastic sleeve B until it clicks into place.</p>	<p>Step 4</p>  <p>Slide the seat A+B onto the cylinder C. Once aligned, press firmly on the seat to engage the seat into the cylinder.</p>
--	---	--	--

Operating Instructions

1. To raise the seat, press any of the 3 buttons under the seat.
2. To lower the seat, press any of the 3 buttons under the seat while sitting on, or pushing on the seat.

Note: if the seat does not raise or lower easily:


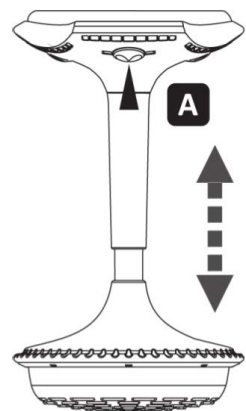
- Confirm the red cap was removed.
- Push firmly on the seat so that it is fully engaged onto the cylinder.



Sitting Instructions

A wobble stool is not a stationary chair. Instead, a wobble stool is designed to let you move freely. The chair can rock, tilt and swivel 360°. Extreme care must be taken when sitting on a wobble stool.

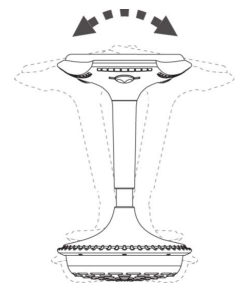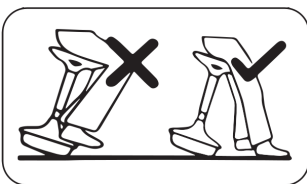Important! Only sit on a wobble stool if both of your feet are firmly planted on the ground and supporting your entire bodyweight.



WARNING: DO NOT LEAN BACK! To reduce the risk of falling, do not tip a wobble stool past vertical.

WARNING: A wobble stool is not to be used by children.

WARNING: Do not use with only 1 foot, or no feet at all on the ground.

User manual is subject to change without notice. For the latest version of your user manual, please visit <https://www.kogan.com/usermanuals/>