



kogan

3-in-1 Vegetable Fruit Turning Spiral Slicer KASLCSPIRLA Quick Start Guide


Usage

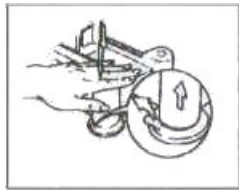


Place the appliance on a smooth surface and press down to cause the suction feet to attach to the bench surface. To release the rubber feet after use, simply pull gently on the rubber hooks.

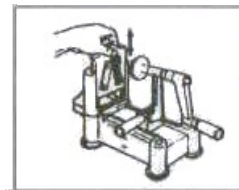


Choose a blade and slide it into the guide. Press the blade into position until it stops.

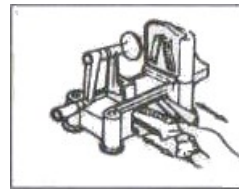


Blades you do not wish to use can be stored in the drawer in the side of the appliance.

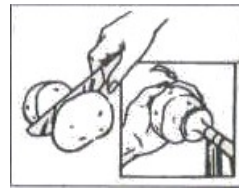

To secure the vegetable in the spiral cutter, cut a piece off one side or end to make a straight edge. Place this straight edge onto the vegetable support, as shown to the left.

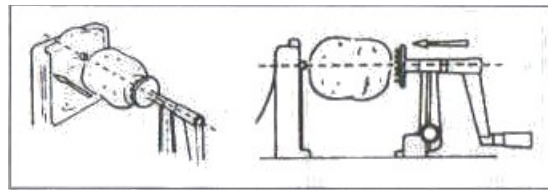

Now fix the vegetable onto the rounded steel guide on the blade insert.

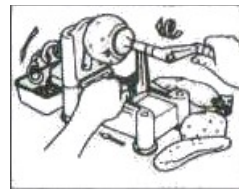

Hold the folding handle with one hand, and then crank with the other. Turn the crank clockwise towards the blade as illustrated, so that the vegetable is cut into spirals, spaghetti or slices.

- After use, remove the blade insert from the appliance and wash both with water.
- Alternately, you may clean the appliance with a cloth and mild detergent.
- The cutter is equipped with SHARP blades. Keep out of reach of children.

If you have any further questions regarding the use of this product, please contact the Kogan customer support team.