

# kogan

SAWLFSLCPJA

## **USER MANUAL**



Thank you for buying the Kogan Cold Press Slow Juicer.

The Slow Juicer contains a revolutionary mechanism where the fresh juice comes from squeezing, rather than grinding. This method is capable of producing soy milk, vegetable extracts, freshly squeezed fruit juice etc.

The Low Speed Technology System squeezes instead of grinding, allowing the juice to maintain its pure colour, natural taste, nutrients and vitamins.

For optimal use and maintenance of the product, please follow these instructions carefully.

Please refer to this user's guide when you are having technical difficulties or if you are unsure of the usage of the product. Kogan is not liable for any damages or injuries that may occur due to lack of understanding of the user's guide.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

## PARTS LIST



## **SAFETY PRECAUTIONS**

Please read carefully before using.  
Please follow instruction to avoid injuries.

### **WARNING**

Do not plug or unplug the electrical plug with wet hands.  
Please plug into the power outlet properly.  
Do not force plug into outlet, ensure plug is away from any heat source and is not bend or twisted in any way.  
Do not disassemble the base. Please consult with Kogan Customer Support for trouble shooting.  
Stop use when the electrical cord is damaged or loose.  
Do not put any unknown substance into the machine.  
Keep the base dry at all times.  
Keep away from children or personnel who aren't familiar with the usage of the product.  
Do not disassemble any parts while operating the machine. Do not put any unknown objects into unit while operating the machine.

### **CAUTION**


Do not operate when the hopper is loose.  
Do not unplug the outlet when there is gas exposure. Instead, open all windows to increase air ventilations.  
Operate on a flat and steady surface.  
Do not put in any objects that are not instructed to be used in the machine.  
Do not move while operating.  
Should the squeezing screw jam, put into reverse for 2-3 seconds, then try operating again.  
Do not disassemble while operating.  
Do not use anything other than the supplied pusher.  
Do not use for more than 10 minutes continuously – it may overheat the motor.  
Do not submerge the motor in water.  
After use, remove plug from power outlet. Do not use the cord itself to remove the plug.  
While using, if there is any unusual odours (heat, smoke) then stop use immediately and contact the Kogan Customer Support Team.  
Please lift the unit with two hands.

## ASSEMBLY INSTRUCTION



1- Assemble the bowl on the base.

- (1) Make sure bowl is all the way into the shaft of the base.
- (2) Twist the bowl to close.

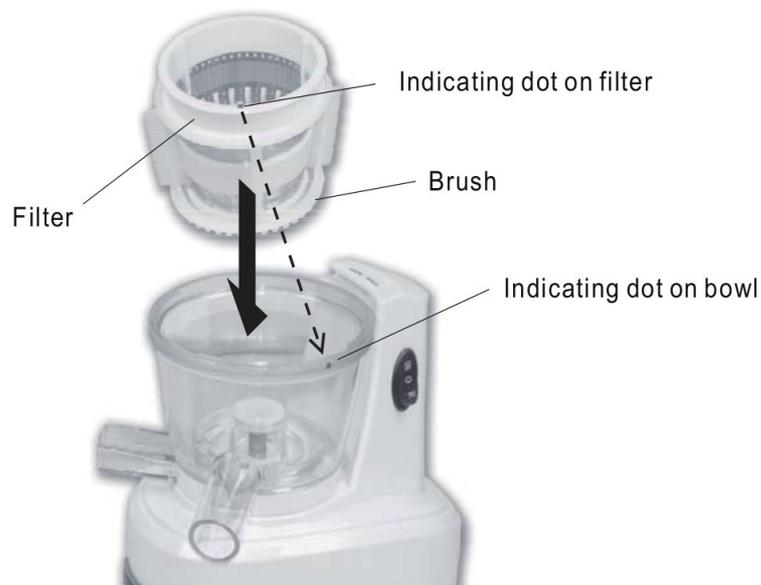

2 – Assemble the strainer and spinning brush into the bowl.

- (1) Make sure the red dot and the black arrow are aligned.




3 – Place the squeezing screw in the center of the bowl.




4 – Assemble the hopper onto the bowl.

(1) Make sure the arrow on the hopper and the red dot on the bowl are aligned.

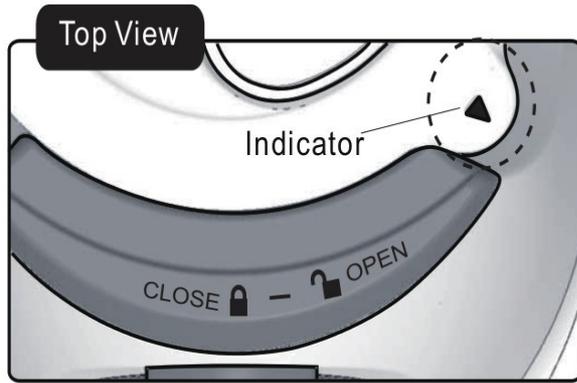

Make sure the arrow on the hopper is pointing to close sign on the base

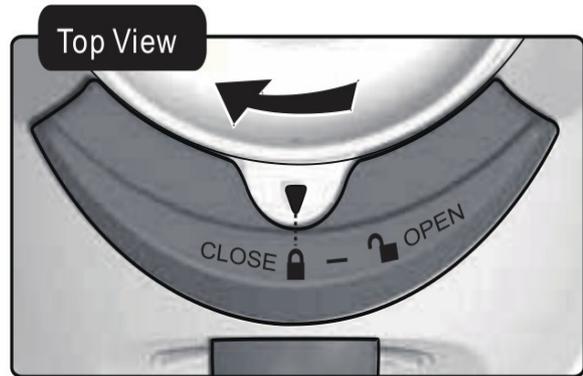

Reverse the step to disassemble

## HOW TO USE THE HEALTH JUICE EXTRACTOR

1. The machine has three settings.

“ON” starts motor, which starts making juice.

“REV” is reverse. Only use when something is stuck and you need to unclog.

“OFF” is at the center position. This allows the machine to turn off.

2. Please rinse everything thoroughly before putting into the machine. After rinsing, put materials into the machine using the pusher. Please remove any hard seeds before inserting ingredients.

3. Turn off the machine after use. Please dry your hands before touching the power switch.

### WARNING DURING OPERATION

Do not use for longer than 10 minutes at a time.

Do not use anything as a pusher (fork, chopsticks, spoons etc.) other than the pusher itself.

Do not pre-operate before inserting ingredients and do not operate with an empty bowl.

Remove any hard seeds.

Do not operate with wet hands.

When the machine is stuck and not operable, please turn off the machine and put it in reverse for a few seconds, then try operating again.

When the reverse switch does not work, turn off the machine and reassemble following the instructions given. After reassembly, please try turning on the machine.

## HOW TO DISASSEMBLE AND CLEAN

1. Turn machine "OFF".
2. Twist the hopper to unlock by grabbing the two ejections. Make sure the arrow is aligned with the open sign before pulling off the bowl (as shown in fig. 1)



3. Follow the order of disassembly as shown in fig. 3



4. Use the brush to clean thoroughly after operation.  
Do not use a metal sponge to clean, as it will damage the machine.  
Do not use dishwasher to clean. (Cleaning shown in fig. 4)
5. Do not rinse the base with direct water. Wipe clean with a damp cloth.
6. Please dry the attachments after cleaning.