

# ovela

## DIY Self Adhesive Wall Clock Quick Start Guide

### Sticker Installation

#### Step 1 : Cleaning




Remove all dirt and dust from the surface that you wish to use, and ensure the surface is clean and dry. Textured walls may not work well.

#### Step 2 : Cutting



Cut loosely around each sticker piece for the purpose of planning the entire design layout on the wall so that it will not be stuck to an undesirable location.

#### Step 3 : Thinking

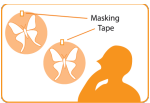

Plan the design layout in any way you like. Temporarily stick the wall stickers to the wall with masking tape without removing the backing so you can see the full layout.

#### Step 4 : Pressing



Once design is confirmed, you can start application. Remove the temporary masking tape and peel off the backing and stick to the wall surface. Rub the stickers flat, pressing firmly down especially around the edges. If there are any bubbles, remove them by rubbing the air towards the edge or poking the bubbles with a needle.

#### Step 5 : Nailing



Put a small nail into the wall, or affix a small 3M hook at the position that you want to mount the clock.

#### Step 6 : Enjoy!



Now you can hang the clock to complete the creation of the wallsticker and clock design on your wall.