

Folding Bike FSBKE20FLDA Quick Start Guide

Safety

Before riding your bike for the first time, ensure that you get it checked and adjusted by a bicycle mechanic. This will ensure that your bicycle is optimally adjusted for performance and safety.

Before each ride, check to ensure the frame latch, frame latch safety hook, handle post latch and handle post safety hook are all properly secured. When secured, the frame and handle post will be completely rigid. Also check your brakes are functioning and the tyre pressures are adequate.

If you bicycle is damaged or the frame latch will not lock securely, do not ride the bicycle. Contact the Kogan.com customer support team for information.

Product Layout



Note: the illustrations in this user manual may differ slightly from the bike model you received. Folding and unfolding instructions are similar and should be used as a reference guide.

Unfolding Instructions



Step One: Prepare to unfold your bike by standing on the side with the chain.



Step Two: Swing the front and rear halves of the bike frame apart.



Step Three: Lock the frame latch lever by pushing it towards the frame.



Step Four: Move the frame latch safety hook into the closed position.



Step Five: Swing the post handle up to the vertical position.



Step Six: Push the handle post latch inwards until it snaps closed.



Step Seven: Rotate the stopper hook until the handle post latch is secured.



Step Eight: Adjust the handle bars to your desired height and position.



Step Nine: Open the seat post release lever and raise the seat to your desired height. Once set, close the seat post release lever. Note: Do not raise the seat post to a height above the safety line marked on the seat post.



Step Ten: Attach or unfold the pedals. If attaching the pedals, please note that the right pedal should be screwed in clockwise and the left pedal should be screwed in anti-clockwise.



Step Eleven: To unfold the pedals, simply flip the pedal into the horizontal position. Be careful to keep your fingers outside the body of the pedal, or they may be pinched by the folding mechanism.



Step Twelve: You are now ready to ride! Enjoy your ride and stay safe!

Folding Instructions



Step One: Prepare to fold your bicycle by standing on the side with the chain. The chain and crank should be in front of you.



Step Two: Move the stem into the folding position. The stem should be extended far enough that the handle bars sit just under the wheel axles when the handle post is extended.



Step Three: Rotate the stopper hook away from the handle post latch.



Step Four: Unlock the handle post latch by pulling it away from the handle post.



Step Five: Swing the handle post into the folded position, which is upside down and flush against the front wheel and frame. Ensure the front wheel stays parallel to the handlebars, sitting just below the wheel axle.




Step Six: Open the seat post quick release and lower the seat post. Twist the saddle 45 degrees to the left, then clock the quick release.



Step Seven: Rotate the cranks so that the left crank is pointed forwards and downward at a 45 degree angle.



Step Eight: Move the frame safety hook to the open position.
Note: your frame latch safety hook may be in a different position than shown in this image.

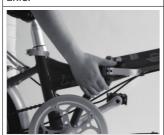

Step Nine: Open the frame latch lever.



Step Ten: Fold the frame in half by swinging the front half of the frame back until the two wheels are parallel.



INCORRECTSaddle is incorrectly positioned and is butting up against the handle post.



CORRECT
When you twist the saddle
45 degrees, there should be
some space between the
saddle and the quick release
lever.



Step Eleven: Snap the folding pedals into position by pushing the pedal body inwards and rotating downwards.



Step Twelve: Your bicycle is now ready for easy transportation or storage.

If you have any questions regarding the use of this product, please contact the Kogan.com customer support team.